

PD-300 COMMAND (LCD 20 x2)

PD-300 MODE

<14> <01>	Specify Overwrite Mode
<14> <02>	Specify Vertical Scroll Mode
<14> <03>	Set Insert Mode Flag
<14> <04>	Clear Insert Mode Flag
<14> <08>	Back Space
<14> <09>	Move Cursor Right
<14> <0A>	Move Cursor Down
<14> <0B>	Move Cursor Left
<14> <0C>	Delete Character
<14> <0D>	Move Cursor To Left Most Position
<14> <0E>	Clear Display
<14> <17>	Cursor On
<14> <18>	Cursor Off
<14> <19>	Reset
<14> <1A> <P>	Move Cursor To Position P (P=1~14,15~28h?)
<14> <10>	Clear Line 1
<14> <11>	Clear Line 2
<14> <12>	Cursor Block Mode
<14> <13>	Cursor Under Line Mode
<14> <16>	Switch To Epson Mode
<14> <1B>	Move Cursor To Rightmost Position Of Line 1
<14> <1C>	Move Cursor To Rightmost Position Of Line 2
<01>	Set Pass Through Flag
<06> <N ₁ > <N ₂ >	Change Leading Code
<21> <23> <02>	Clear Pass Through Flag

EPSON MODE (Power On Default)

<1F> <01>	Specify Overwrite Mode
<1F> <02>	Specify Vertical Scroll Mode
<1F> <03>	Specify Horizontal Scroll Mode
<1F> <0A>	Move Cursor Up
<1F> <0D>	Move Cursor To Right Most Position
<1F> <24> <n> <m>	Move Cursor To Specified Position
<1F> <40>	Show Version
<1F> <42>	Move Cursor To Bottom Position
<1F> <45> <n>	Blink Display Screen
<1F> <43> <n>	Cursor On Off
<1B> <3D> <n>	Select Peripheral Device
<1B> <40>	Initialize Display
<08>	Move Cursor Left
<09>	Move Cursor Right
<0A>	Move Cursor Down
<0B>	Move Cursor To Home Position
<0C>	Clear Display Screen
<0D>	Move Cursor To Left Most Position
<18>	Clear Cursor Line

217 W X 82 H X 24.5 D (w/o base)

217 W X 88.2 H X 89 D (w/ base)

VIEW WINDOW: 147 X 21