


- d. Set Pole Display Stud onto POS terminal base by using two screws.

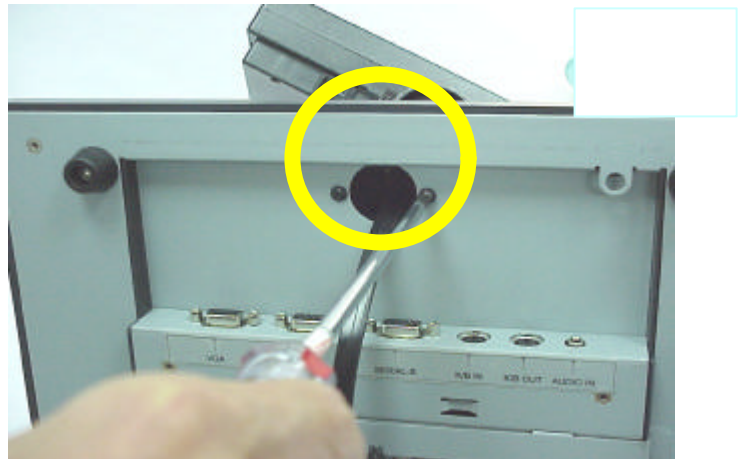

5. On-Screen Display

OSD MENU V1.1				
I-CONTRAST	(automatically adjust clock, phase, brightness, contrast, load default)			
CONTRAST	(screen contrast adjustment)			
BRIGHTNESS	(screen contrast adjustment)			
SHARPNESS	1	2	3	OFF
OSD POSITION	H (horizontal)	V (vertical)	T (transparency)	RECALL VALUE (return to default setting)
LANGUAGE	ENGLISH(default)			
	FRENCH			
	SPANISH			
	GERMAN			
	CHINESE			
	JAPANESE			
H/V-POSITON	H(horizontal)		V(vertical)	
ADVANCED SET	RGB COLOR		R(red)	
			G(green)	
			B(blue)	
	PHASE			
	CLOCK			
	COLOR LEVEL		W(white)	
B(black)				
AUDIO	(volume adjustment)			

- a. To save a function, press ENTER button. If you do not use or change any value of the control function, the OSD will disappear in 16 seconds.
- b. While the display is capable of other resolutions (as with all flat panel displays), it is a fixed matrix of pixels and best used at its native resolution – 800 x 600. For further information, please refer to your display card or system manual.AUTO ADJUST